

# How to Care for Your Oberon Faceshield

Your faceshield is an important component of your overall Personal Protective Equipment (PPE). Therefore, like any safety product you are using to protect yourself, it should be handled with respect and reasonable care (don't just throw it in your tool box or in the back of your truck with other tools). Here are some recommendations on how to care for and maintain your faceshield. If you have any question, please contact Oberon customer services at 800-322-3348.

## Recertification


Your faceshield does not require recertification.

## Washing & Cleaning

The faceshield should be kept clean for the best vision. It can be cleaned with water and mild soap and dried with soft cloth.

## Maintenance

To keep your faceshield secure, from time to time, you should hand tighten the nuts (A) and bolts (B) on the faceshield. Please do not torque the nuts (A) too tight or you will not be able to lift the shield up and down when on a hard cap.

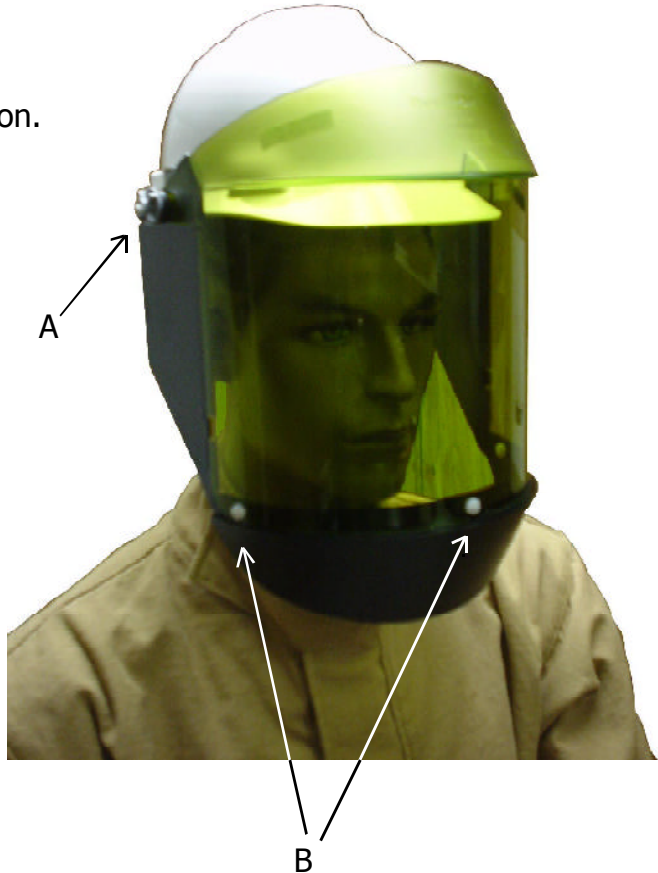

## Storage

Please store your faceshield in a Oberon shield bag nylon or canvas to protect it from dust and scratch.

For over 20 year, since Oberon created the first Arc Flash faceshields and clothing, the industry has looked to Oberon as the leader.



22 Logan Street  
New Bedford, MA 02740  
Toll Free: 800-322-3348  
Fax: 508-999-4443